


PrintWiz®

PRINT YOUR OWN TAPE!

1 Get familiar with your Print Wiz®

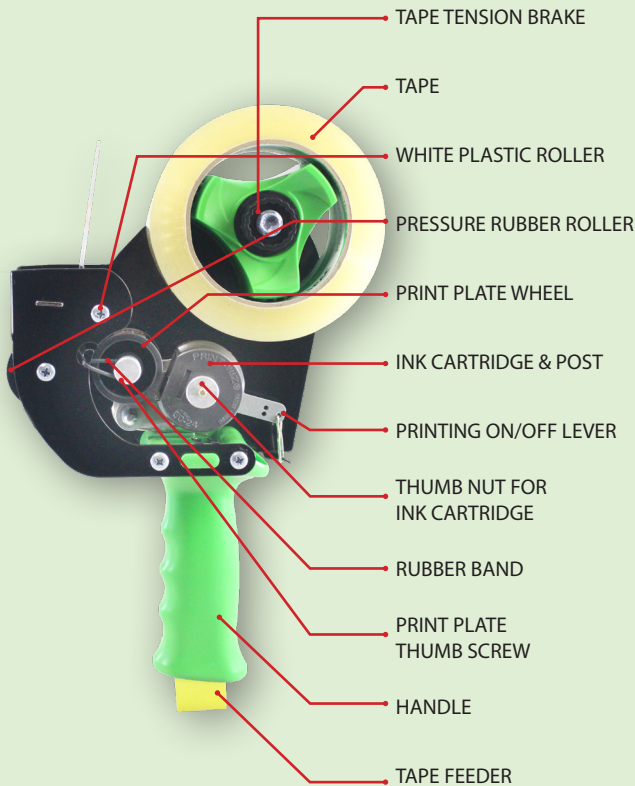

DISCLAIMER: To increase product life span, operate the unit with care and regularly apply basic maintenance by tightening all screws, blowing and/or brushing away dirt and lightly lubricating all moving parts.

OPERATING INSTRUCTIONS:


2 Insert the print plate wheel

- Remove the print plate thumb screw, insert the print plate wheel and replace print plate thumb screw. Make sure that the print wheel is inserted in the correct direction as indicated below.



3 Insert the ink cartridge



- Remove the thumb nut for ink cartridge.
- Place the cartridge onto the cartridge post, flat side facing print plate wheel, **ensure it is in locked position.**
- Secure the ink cartridge with the thumb nut.

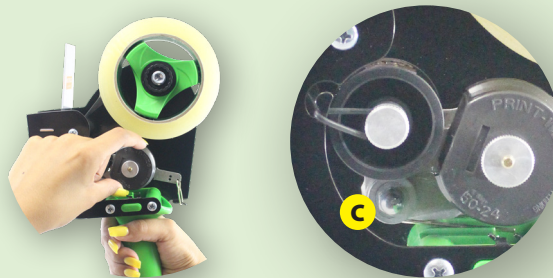

- Place the rubber band onto thumb screw and the hook on the frame of the Print Wiz® (near the thumb screw as indicated above in Figure C).
- Unlatch printing on/off lever to place into "printing on" position.
- Adjust tape tension brake. **Do not over tighten.**

4 Insert the 2" carton sealing tape

- Place the tape into position, adhesive side down.
- Ensure the printing on/off lever is in "printing off" position (Figure A), lever depressed and latched.
- Retrieve the tape feeder from inside the handle.

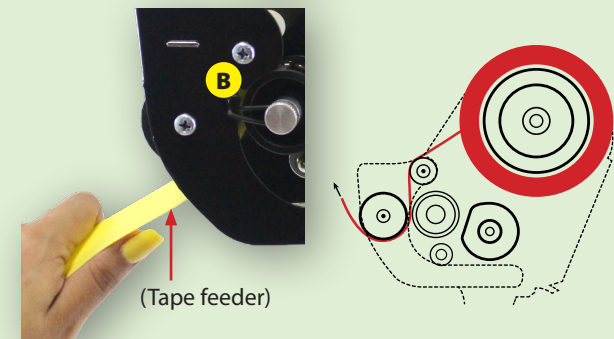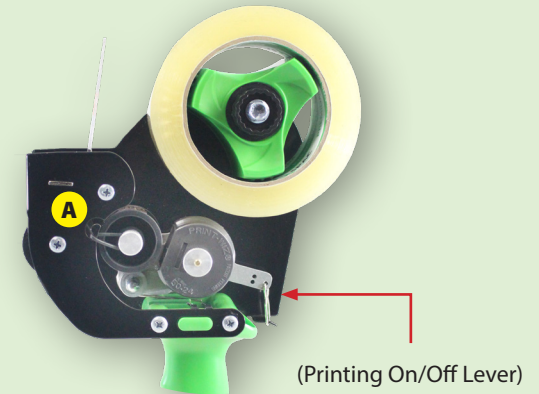

- Stick the start of the tape to the end of the tape feeder.
- Insert the tape feeder over the white plastic roller and straight down. Pull the tape feeder around the pressure rubber roller and out (Figure B). Then cut against the blade.

NOTE:

When Print Wiz® not in use, keep printing on/off lever in "printing off" position.